

Category	Command	Phrases to say
Climate	Set absolute SetPoint	Set "Living room" 30°
	Read current temperature	What is the temperature in "Living room"?
	Read SetPoint	What is the current "Living room" setting?
		What is my "living room" set to
	Set relative SetPoint	Decrease "Sitting room" by 3°
		Lower the temperature of my "Living Room" by 3°
		Lower "Living Room" by 3°
	Request current mode	What is the set "Living room" mode?
		What is the current "Living room" mode setting?
	Set mode	Set "Living Room" to cooling mode
		Set "Living Room" to cool mode
		Set "Living Room" to heating mode
		Set "Living Room" to heat mode
		Set "Living Room" heating
		Set "Living Room" to cooling
		Set "Living Room" to off mode
Blinds	Raise blinds	Open "Bedroom Blinds"
	Lower blinds	Close "Bedroom Blinds"
	Request opening status	Is the "Blind" closed?
		Is the "Blind" open?
	Open/Close blinds	Raise "Bedroom Blind"
		Lower "Bedroom Blind"
		Open "Bedroom Blind"
		Close "Bedroom Blind"
	Set relative blind position	Raise "Bedroom Blind" by 5%
		Lower "Bedroom Blind" by 5%
		Open "Bedroom Blind" by 5%
		Close "Bedroom Blind" by 5%
	Set absolute blind position	Set "Bedroom Blind" to 75%
		Raise "Bedroom Blind" to 20%
		Lower "Bedroom Blind" to 20%
		Open "Bedroom Blind" to 20%
		Close "Bedroom Blind" to 20%

Category	Command	Phrases to say
Lights	Switch on light	Turn on "Bedside Lamp"
	Switch off light	Turn off "Bedside Lamp"
	Switch off dimmer light	Switch off "Dimmer light"
	Switch on dimmer light	Switch on "Dimmer light"
	Increase general brightness	Increase "Dimmer Light" brightness
	Increase specific brightness	Increase "Dimmer Light" brightness by 10%
	Decrease specific brightness	Decrease "Dimmer Light" brightness by 14%
	Set brightness SetPoint	Set "Dimmer Light" to 50%
	Set light colour	Set "Right Room Light" to red
		Make "Right Room Light" yellow
	Increase general brightness	Increase "Right Room Light" brightness
Sprinklers	Switch on sprinklers	Turn on "Sprinkler"
	Switch off sprinkler	Turn off "Garden sprinkler"
Scenarios	Activate scenario	Activate "Entry Scenario"
		Turn on "Entry Scenario"
Other	Switch on other	Turn on "Pump"
	Switch off other	Turn off "Pump"
Automation	Activate automation	Open "Front gate"
	Deactivate automation	Close "Front gate"
ViP lock-release	Door opening	Unlock "Front door" OK
ViP actuator	Enable actuator	Unlock "Gate"